



Cocos (K) Islands

Community Resource Centre


Your local connection

Tip#9

How To Quickly Enable Flight Mode

Airplane mode is a setting available on most devices that disables transmitting signals. Originally designed to prevent mobile device signals from interfering with aircraft systems, it provides a simple way to turn off all wireless transmitters and toggle them back on quickly.

It is smart and efficient too!

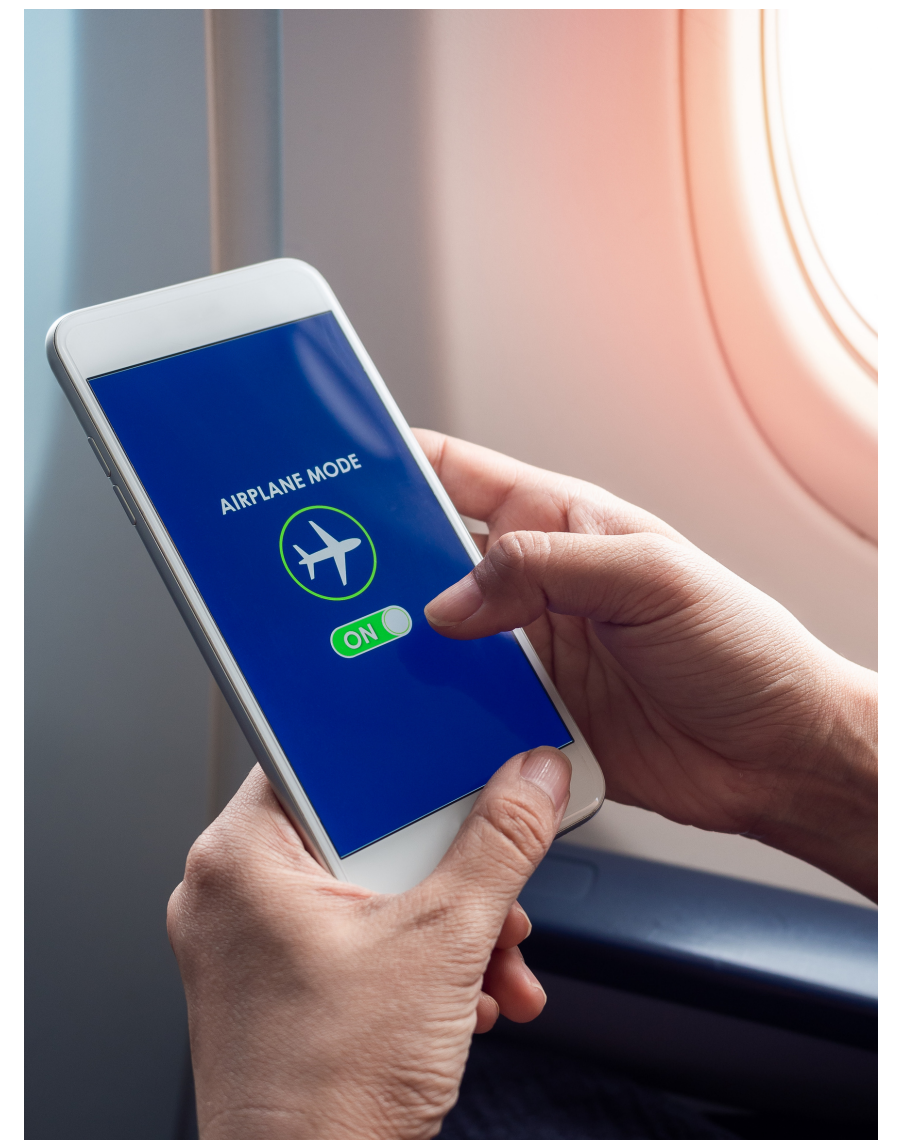

Apple Phones

- 1 Tap the Settings icon from the home screen on your iPhone or iPad, then tap the iPhone settings app. Toggle the Airplane Mode switch on or off - it's the first option under your Apple ID.**
- 2 You can find Airplane mode in the Control Center on your iPhone if you want faster access to it.**
- 3 On an iPhone X or newer, swipe down from the top right corner of the screen. Tap the Airplane Mode button to toggle it on or off - it's in the network settings section.**

Note: On older versions with a Home button, swipe up from the screen's bottom edge.

Android Phones

- 1 Swipe down from the top of your screen to display the quick settings icons.**
- 2 Tap the Airplane mode icon to turn it on or off. When highlighted, it's on and when grayed out, Airplane mode is off.**
- 3 It should be there by default, but if you don't see the button, tap the Edit (pencil icon) button.**

Tap the Airplane mode button from the available icons and drag it up to the menu. You may need to swipe left or right to find it in the available icons section.